

Uniview NVR Recovery – 512 BYTE

Help

Contents

1. [Short software description](#)
2. [System requirements](#)
3. [Complete and Demo versions, restrictions](#)
4. [Purchase and software installation](#)
5. [Order of the software use. Interface](#)
6. [Software messages description](#)

1. Short software description

The software finds video files recorded by NVR Uniview family, and identifies date and time intervals of the recording and channel number.

2. System requirements:

- Operation system: Windows 7, Windows 10
- Hard disk drive: no less than 10 MB of the free space on a disk
- Enough space on disk with result folder to store recovered data
- RAM: no less than 1 GB

3. Complete and Demo versions, restrictions.

Complete version of Uniview Recovery (file Uniview Recovery.exe) – works and gives full functional only if file regkey.dat is available with the conditions corresponding to the bought license.

DEMO version of Uniview Recovery (file UniviewRecovery Demo.exe).

Operates and provides all functionality of the program with this restriction: Only part of the found files will be saved, but you can still see a list of all found files in the log.

Demo version is standalone executable file that does not need any license file.

4. Purchase and software installation.

Demo version requires to download the latest version of **Uniview Recovery** from the website <http://soft.512byte.ua> and to run *Uniview RecoveryDemo.exe*.


The complete version requires the next steps:

1. Pay the license on the website <http://soft.512byte.ua>.
2. Wait for receiving files *GetHardwareIDwl.exe* and *Uniview Recovery.exe* by E-mail mentioned in the previous point.
3. Run the program *GetHardwareIDwl.exe* on the PC where *Uniview Recovery.exe* is planned to be used.
 - 3.1. Send to E-mail: soft@512byte.ua the text file *HardwareID.txt* with information about the equipment. Example of the *HardwareID.txt* file content: "Your Hardware ID: 1055-4E4B-5E3C-9DA0-6F37-EBCA-281B-3CF8".
4. Wait till the file with the license *regkey.dat* will be received by the mentioned E-mail.
5. Place the received *regkey.dat* file in the folder with *Uniview Recovery.exe*.
6. Run *UniviewRecovery.exe*.

5. Order of the software use. Interface.

To run Unview Recovery, you must provide administrator rights.

The main program's window is used for setting of input data and basic parameters.

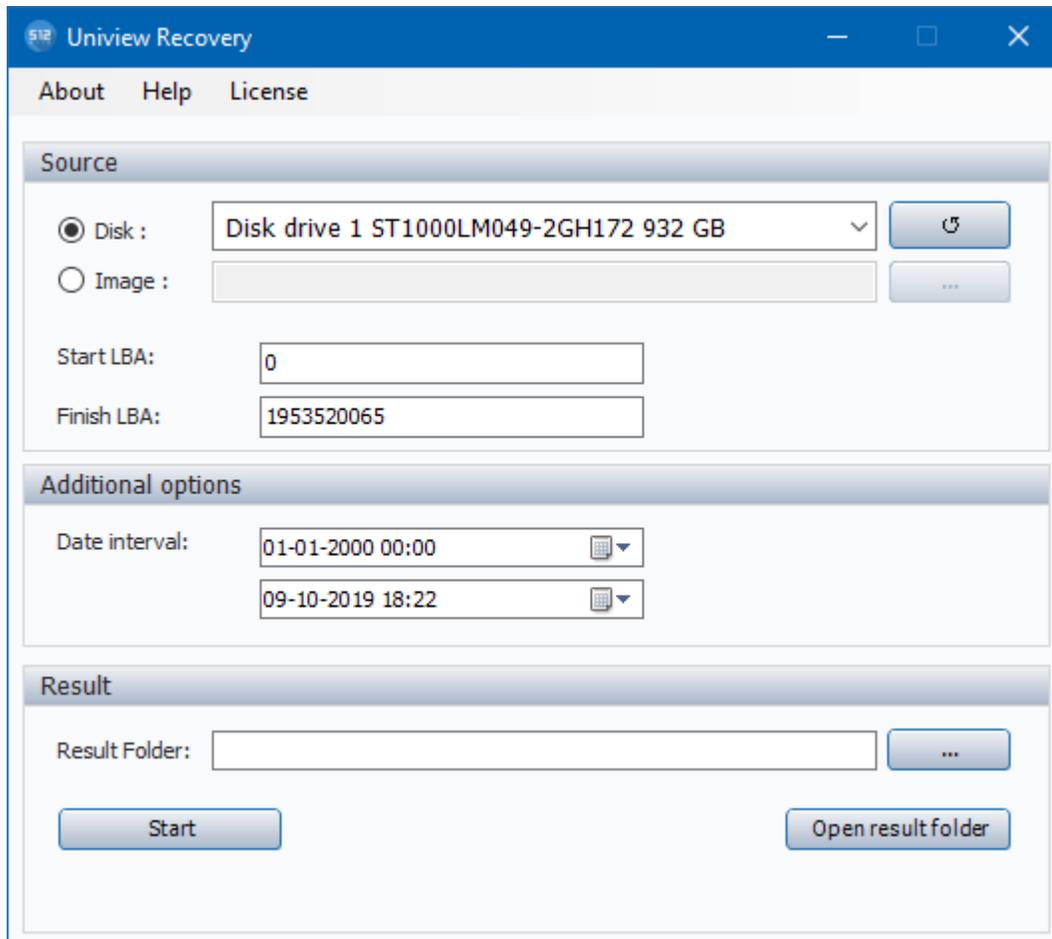

1. Source – here you can choose data source (Drive or Image).
Start LBA, Finish LBA – allow you to set boundaries for a disk or image to read.
2. Additional options – here you can set date interval. Only files within this interval will be saved.

3. Result – here you can choose result folder, open it and start recovering.

6. Software messages description.

In case of unhandled exceptions, the program will show a message window with an error.

If you see this message, please contact us by e-mail soft@512byte.ua.

[Return to Content.](#)